

SheenPlus

For an oiled look with extra sheen

SheenPlus is a 0% VOC wood finish that provides a durable satin look to wooden surfaces that have been treated with Oil Plus 2C. This product may be applied on all indoor wood surfaces, including furniture, countertops, tables, stairs, walls, floors, etc., treated with Oil Plus 2C. The combination of the oil (A) and accelerator (B) ensures a fast cure time, resulting in excellent protection. Plus, it's solvent and water-free.



PRODUCT INFORMATION

> Specific characteristics

- Long-lasting satin finish
- No overlaps
- Low consumption
- Scratch-resistant result
- Based on natural ingredients, 0% VOC
- To be applied by hand or with a polishing machine with pad
- 100% solid content

> Technical characteristics


- Base: blend of natural oils
- Consistency: liquid
- Flash point cc (astm d93): > 60° C (140°F)
- Density: ± 1.05 kg/L
- VOC content: 0 g/L

DRYING TIME	24 - 36h
CURING TIME	7 days
APPLICATION INFORMATION	All vertical and horizontal interior surfaces (e.g. floors, tabletops, furniture, bathrooms, kitchens, stairs, walls, etc.)
CONSUMPTION	1L = ± 125 m ² * (1L = 1 250 square feet)
IDEAL WORKING TEMPERATURE	15 - 25 °C (60 - 77 °F)
RELATIVE HUMIDITY APPLICATION RANGE	35 - 60%
MOISTURE CONTENT RANGE	8% - 12%
STORAGE	Min. + 5°C (41°F), max. + 30°C (86°F) The product can be stored up to 36 months in dry conditions and in its original packaging.

CLEANING	Earliest after 2 days: dry cleaning only Earliest after 7 days: cleaning with water and All Natural Wood Cleaner (Spray)
ADVANTAGES	Enhanced satin sheen over Oil Plus 2C
POTLIFE	SheenPlus may be used for a maximum of 4-6 hours after mixing A + B component together.

** These usages are merely indicative. Results depend on the wood type and method of preparation. It is always recommended to make a sample in order to calculate the exact usage.*

› Packaging

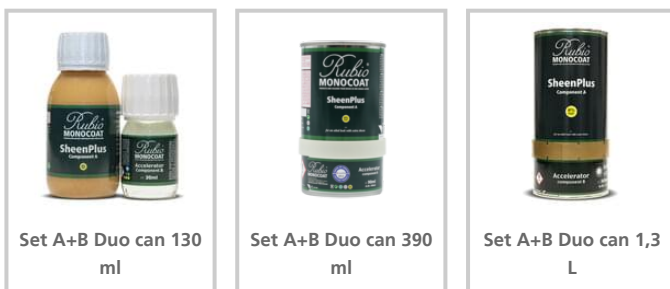

› Storage

The product can be stored up to 36 months in dry conditions and in its original packaging. Keep away from frost.

APPLICATION INFORMATION

> Instructions

> Preparation

SheenPlus is designed to be used over wood surfaces treated with Oil Plus 2C.

On unfinished wood surfaces:

First, apply Oil Plus 2C to the wooden surface. Refer to the Oil Plus 2C technical data sheet for application instructions. After a drying time of at least 24 hours, the SheenPlus can be applied.

On a surface that has previously been treated with Oil Plus 2C and where the colour is still intact:

Clean the surface thoroughly with water and All Natural Wood Cleaner or Deep Cleaner. Rinse well with water to remove all soap residues. Once the surface is completely dry, SheenPlus can be applied.

On a surface that has previously been treated with Oil Plus 2C and where the colour also needs to be restored:

First renovate the surface with Oil Plus 2C, in the colour with which the surface was originally treated. Consult the TDS for Oil Plus 2C renovation guidelines. After a drying time of 24 hours, the SheenPlus can be applied.

> Instructions

Application on furniture and tables

STEP 1. Let the Oil Plus 2C dry for at least 24 hours.

STEP 2. Thoroughly mix the two components together for 1 to 2 minutes, ensuring a ratio of approximately 3 units A to 1 unit B.

STEP 3. Apply the SheenPlus with a brush, sponge, ... and spread further with a red Scrubby Pad. Within 15 minutes, go over the same surface again with the red Scrubby Pad without adding additional product.

STEP 4. Wipe again with a white Scrubby Pad.

STEP 5. Remove any streaks and/or surface irregularities with a lint-free cloth.

STEP 6. Immediately after wiping with the cloth, wipe the oiled surface one more time with the same white pad that was used in STEP 4 (make sure to use the oily side of the pad to do this final step). Wipe the surface in a circular motion and finish wiping the surface in the length of the boards to finish the SheenPlus application.

STEP 7. Let dry for at least 24 hours before using the surface. To ensure effective drying and curing, it is important to maintain proper ventilation and temperature. Full curing takes place after 7 days.

Application on floors

STEP 1. Let the Oil Plus 2C dry for at least 24 hours.

STEP 2. Thoroughly mix the two components together for 1 to 2 minutes, ensuring a ratio of approximately 3 units A to 1 unit B.

STEP 3. Apply the SheenPlus using a floor polisher with a red Rubio Monocoat pad. Spread the product so that no irregularities can be seen in the treated area. Preferably treat areas of 2 to 4 m² (20 to 40 SF) (areas that are not too wide). Make sure you can easily treat the area with the polishing machine without stepping in wet product.

- Tip: If the layout of the area being treated does not allow you to work without standing in the still wet product, use (half) a white pad to stand on during application.

STEP 4. Within 15 minutes, finish this area with a white Rubio Monocoat pad until the surface is completely even and rubbed dry.

STEP 5. Repeat these treatments over the entire surface in areas that can be treated within 15 minutes.

STEP 6. Let dry for at least 24 hours before carefully walking on the surface. To ensure effective drying and curing, it is important to maintain proper ventilation and temperature. Full curing takes place after 7 days.

› **Maintenance Instructions**

Renovation/maintenance

If the product starts to show too much wear (traffic pattern), you can easily solve this by applying a new coat. First, make sure to remove any dust and dirt prior to applying a maintenance coat. Refer to the steps on pages 2-3 for the proper cleaning and application instructions.

When Oil Plus 2C colour wear is evident, first perform a repair/renovation with the original Oil Plus 2C colour (Part A & B must be used for the colour restoration). After that, let dry for at least 24 hours. Then, apply SheenPlus to the repaired area and let it dry for 24 hours. After that, apply SheenPlus to the entire surface.

> Tips & tricks

- For optimal results, it is mandatory to add the SheenPlus component B in the correct ratio to the SheenPlus component A.
- It is very important to allow a minimum drying time of 24 hours between the application of the Oil Plus 2C and the SheenPlus. To avoid colour pull when applying SheenPlus, allow Oil Plus 2C to completely dry. If you notice excessive colour pull, give the Oil Plus 2C more time to dry before applying SheenPlus.
- SheenPlus must always be applied with a polishing machine for on-site applications and can never be applied with a standard lacquer roller.
- During the first week after application of the SheenPlus only dry cleaning is allowed. Afterwards, damp cleaning can be done with All Natural Wood Cleaner (Spray) or a water dampened mop. We recommend cleaning with a microfiber mop or damp cloth no more than once a week.
- Do not apply too much product to avoid the surface becoming sticky.
- Due to the higher viscosity, we recommend using a red pad for the initial application and spreading of the SheenPlus instead of a beige one.

REMARK

The product may not be diluted in any case!






WARNING

Cloths and other application tools, saturated with oil, may spontaneously combust. After usage, immerse them in water and leave them for a while before disposing of them.


> Consumption

Packaging	Indicative consumption
130 ml	16,25 m ² (162,5 square feet)
390 ml	48,75 m ² (487,5 square feet)
1,3 L	162,5 m ² (1625 square feet)

> Tools

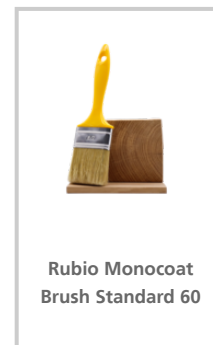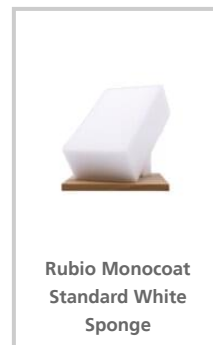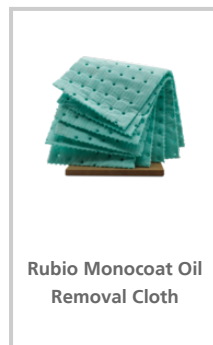

> Related products

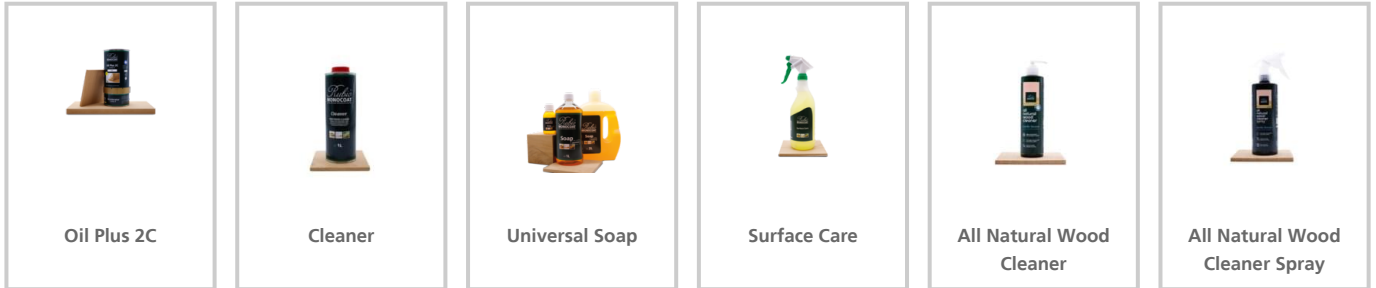

> Certificates



Check the packaging and the safety data sheet for more details.

For our complete assortment of products for the protection and colouring of interior and exterior wood, please visit www.rubimonocoat.com

LIABILITY: It is the user's responsibility to establish, through his own tests, whether the product is suitable for the chosen application. In no case can Muylle Facon NV be held liable for any consequential damage. The information above may be subject to changes, which will be published in the updated versions of the technical data sheet. We cannot be held liable for poor results due to causes that are not related to the quality of the product. This technical information has been drawn up based on the currently available information and knowledge. The most recent technical data sheets can be requested or are available on the website.

Date of TDS: 15/03/2024. Check the safety information before using the product.



Rubio[®] MONOCOAT

MUYLLE  FACON

Muyllé Facon NV
Ambachtenstraat 58
8870 Izegem (BELGIUM)

Phone +32 (0) 51 30 80 54
Fax +32 (0) 51 30 99 78
info@muylléfacon.be

www.rubimonocoat.com